


# Assembly Instructions for Hi-Def Tablet Speaker

Read through this entire instruction manual BEFORE using your **Hi-Def Tablet Speaker**.

We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials for 1 year from the date of purchase.

For service claims or questions please consult our website **ProtocolNY.com**.

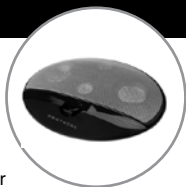

## POWER SUPPLY

1. Remove the battery compartment cover at the bottom of the speaker.
  2. Install 4 AAA batteries (not included) into the compartment according to the indicated polarity of "+" and "-".
  3. Close the compartment cover
- OR
4. Connect DC 6V adapter (not included) jack with the DC 6V hole in the speaker and plug into the wall.

## SPEAKER OPERATION

1. Push the ON/OFF switch located on the back of the speaker to the ON position to power the speaker.
2. Remove the audio cable from the battery case.
3. Connect audio players such as iPad\*, iPod\*, iPhone\*, iPod touch\*, cell phones with 3.5mm earphone jack and the majority of MP3 players on the market to the audio cable.
4. The MP3 player can be placed vertically or horizontally in the resting slot.
5. The volume button is located on the back of the speaker next to the power button.

\*iPad, iPod, iPhone, and iPod touch are registered trademarks of Apple, Inc.

## CAUTION

1. This is not a toy. Please keep away from small children.
2. Please keep the unit away from water.
3. Remove batteries from the unit when it is not used for a long time.