

# Assembly Instructions for Flat Panel TV Wall Mount

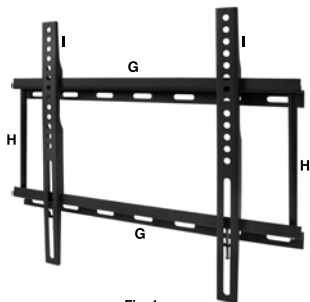


Fig. 1



## Parts Included:

- A) Four plastic anchors
- B) Four two inch heavy duty screws
- C) Four  $\frac{3}{4}$ " bracket screws
- D) Four  $\frac{1}{2}$ " mounting screws
- E) Four  $\frac{3}{4}$ " mounting screws
- F) Eight washers (4 large and 4 small)
- G) Two 19  $\frac{3}{4}$ " long horizontal brackets
- H) Two 8" vertical brackets
- I) Two 17" long vertical brackets with bolts attached

## Wall Mount Assembly:

Use Figure 1 for reference when assembling this product.

**Make sure to use the studs in your wall before mounting the bracket body. Do not mount this product into the drywall.**

1. Take one 19  $\frac{3}{4}$ " long horizontal bracket (G), making sure the slotted openings are hanging down with the ledge facing towards you and affix both 8" vertical brackets (H) using two of the  $\frac{3}{4}$ " bracket screws (C) to each end.
2. Take the other 19  $\frac{3}{4}$ " long horizontal bracket (G), making sure the slotted openings are hanging down with the ledge facing towards you and affix it to the other end of the 8" vertical brackets (H) using the remaining two  $\frac{3}{4}$ " bracket screws (C) to each end.
3. Drill four holes into the wall taking care to measure the distances to fit the wall mount body. Insert the four plastic anchors (A) into the holes and then affix the wall mount body to the wall by inserting the four 2 inch heavy duty screws (B) through the slots and into the anchors. Make sure the slotted openings are hanging down and the ledge is facing towards you. Use a drill to secure.
4. Take the two 17" long vertical brackets (I) and install them onto the back of the flat screen TV. Insert mounting screws (either D or E) and washers (F) into the holes on the brackets (I) and fit them to the holes on the back of the TV. Use a screwdriver to carefully secure.
5. Take the two 17" long vertical brackets (I) with the TV mounted and fit the grooves onto the ledges of the 19  $\frac{3}{4}$ " long horizontal brackets (G). Use the attached bolts to tighten the vertical brackets (I).

## Warning:

- Use caution when hanging heavy objects.
- Hang only flat screen televisions on wall mount.
- Not for children.