


Instruction Manual for Fisherman Plus™

Read through this entire instruction manual BEFORE using the **Fisherman Plus**.

We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials for 1 year from the date of purchase.

For questions please consult our website ProtocolINy.com.

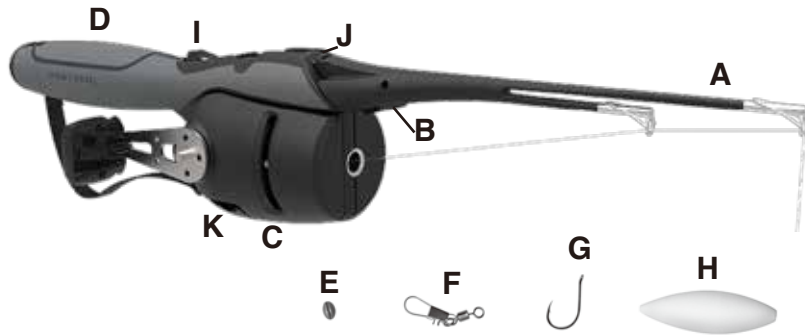

PARTS

- A. Rod
- B. Unlock Button
- C. Reel Compartment
- D. Storage Compartment
- E. Sinker
- F. Swivel
- G. Hook
- H. Float
- I. Line Lock
- J. Drag Wheel
- K. Compartment Latch

Extending and Closing the Rod:

Pull the rod into its extended position. The rod will automatically lock.

To close, press the unlock button and pull the rod back to close (Fig. 1)



Fig. 1

Storage Compartment:

Push in the tab and lift the lid of the compartment to access the sinker, swivel, hook, and float (Fig. 2).



Fig. 2

Installing Accessories:

Float - the float slides directly onto the line. Slide the float on the line before installing the swivel and hook.

Sinker - slide the line through the slit in the sinker and squeeze the sinker shut. Slide the sinker on the line before installing the swivel and hook.

Swivel - Once you have installed either a float or sinker, tie the circle end of the swivel to the line.

Hook - Once the swivel is attached to the line, open the other end of the swivel like you would a safety pin, and slide it through the circle of the hook. Close the swivel.

Casting Your Line:

1. Hold the line lock button down as you are preparing to cast your line.
2. Release as you cast to unlock the line.

Reeling In The Line:

Rotate the reel forward to draw in the line.

Drag Wheel:

The Fisherman Plus fishing line is rated for 8lbs. Use the drag wheel to set the resistance that a fish feels when pulling your line. This will help prevent the line from breaking when you catch a fish that is larger than 8lbs.

Accessing the Reel Compartment:

Press down and pull out on the compartment latch to access the reel compartment (Fig.3).



Fig. 3