


# Instruction Manual for 7pc Cordless Trimmer Set

Read through this entire instruction manual BEFORE using your  
7pc Cordless Trimmer Set.

We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials for 1 year from the date of purchase. For service claims or questions, please visit our website [ProtocolNY.com](http://ProtocolNY.com).

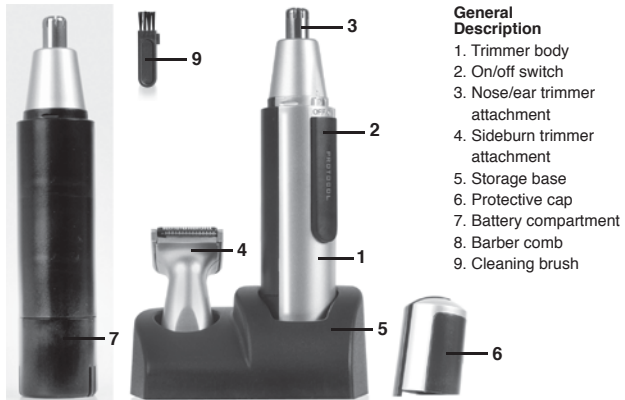

## General Description

1. Trimmer body
2. On/off switch
3. Nose/ear trimmer attachment
4. Sideburn trimmer attachment
5. Storage base
6. Protective cap
7. Battery compartment
8. Barber comb
9. Cleaning brush

## HOW TO USE

### FITTING THE BATTERY

1. To install the battery, gently push the battery cover off the back of the trimmer body.
2. Insert 1 'AA' battery according to indicated polarity inside the battery tray.
3. Push the battery cover back onto the trimmer body until you hear a click.

## INSTRUCTION FOR ATTACHMENTS (Fig. 1)

1. To change attachments, hold the trimmer body with the on/off switch side facing towards you. You will see a small circle and a small triangle at the top of the trimmer body.
2. Turn the attachment currently on the trimmer to the right. A small line indicator should go from the circle to the triangle.
3. Gently pull attachment from the trimmer body.
4. Gently push desired attachment on to trimmer body so the small indicator is in line with the triangle.
5. Turn the attachment to the left until it lines up with the circle and clicks into place.



## HOW TO USE ATTACHMENTS

### (A) NOSE/EAR TRIMMER

1. Turn the trimmer on.
2. Gently approach the area to be trimmed. Never force the nose/ear trimmer into nose or ear cavities as this can result in injury.
3. If you experience any pain or discomfort when using this product STOP using it immediately.

### (B) SIDEBURN TRIMMER

1. Turn the trimmer on.
2. You can use this attachment for smaller areas such as hairlines and sideburns. Hold the trimmer so the shaver screen gently touches your skin. Avoid holding the trimmer at an angle as this will distort the screen and may cause some skin irritation.

## CLEANING & MAINTENANCE

Clean your trimmer regularly. Make sure switch is turned "OFF" before cleaning.

### CLEANING WITH BRUSH

Never expose trimmer body to water.

Use the included cleaning brush to clean the unit. Thoroughly brush and blow out hair clippings.

## CLEANING ATTACHMENTS WITH WATER

The trimmer's attachments have rust-resistant, stainless steel cutting blades that permit the cutting attachments to be rinsed under running water if you choose. Do not wash attachments when attached to trimmer. Always keep blade area pointed downward when cleaning. Only after unit has dried completely should the attachment be used.

! Do not use harsh or corrosive cleaners on the unit or its attachments.

! Do not apply pressure or hard objects to attachments.

## BATTERIES

1. Requires 1 'AA' battery (not included), DC 1.5V.
2. Remove the battery if the product is not going to be used for some time.
3. Always remove the exhausted battery from the product and dispose of safely.

## SAFETY INSTRUCTIONS

This trimmer is an electrical device; please pay attention to the following safety instructions:

1. Only use the trimmer as described in this manual.
2. Not suitable for children and keep out of reach of children.
3. Check trimmer for mechanical damages and replace if necessary. Never use a damaged trimmer as it may result in injury.