


Instruction Manual for Cordless 3-in-1 Trimmer

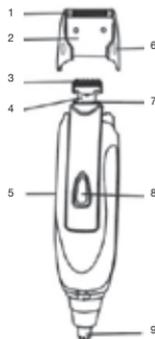

Parts

1. Foil
2. Foil holder
3. Blade
4. Blade holder
5. Power switch
6. Press to detach the foil
7. Hair trimmer switch
8. Hair trimmer
9. Trimmer



Read through this entire instruction manual BEFORE using your 3-in-1 Groomer.

We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials for 1 year from the date of purchase.

For service claims or questions please consult our website ProtocolNY.com.

Precision grooming with professional, rotating micro-cut stainless steel cutting system grasps hair and cuts faster, simpler, and safer than scissors.

Safety Information:

- The groomer is only intended for cutting hair.
- Not suitable for children.
- Keep out of reach of children.
- Do not leave equipment unattended when switched on.
- Switch equipment off after use and replace blade guard cap on the cutting head.
- If the equipment is not used for long periods of time, remove batteries.
- The equipment meets the requirements of the EU guideline on Electromagnetic Compatibility (EMC) 89/336/EEC.

Install 2 'AA' batteries

How to use the Shaver

- Clean and dry your face before shaving (Fig.4)
- Shave against the grain of the beard for a close shave (Fig.5)
- Stretch the skin slightly (Fig.6)
- Shave twice
- For heavy and long beards, first shave the whole beard lightly and then repeat for a neat, clean shave (Fig.7)



How to use the Trimmer

- With the power switch turned ON, slide the hair trimmer switch upwards (Fig.8)
- Slowly trim the sideburns, holding the shaver at a right angle and pressing lightly against the skin (Fig.9)
- When finished trimming turn the switch off and retract the trimmer

How to use the Nose and Ear hair trimmer

- Press switch and push downward to make the nose & ear hair trimmer protrude, then insert the cutter into nostril and ear cavity carefully, to trim the nose hair and ear hair.



Care and Maintenance

Be sure to turn off the shaver.

To maintain the sharpness of the blades:

- Clean the shaver every 2 or 3 days. Any whiskers left on the blades may result in an uneven shave
 - Once a week, apply shave oil or high quality machine oil to the blades and operate the shaver without applying any pressure.
1. Turn off the switch
 2. Press the foil frame button and detach the foil frame (Fig.10)
 3. Clean off any whiskers from the shaver body with the provided brush.
 4. Clean the foil and blades with the brush (Fig.11)
 5. While grasping the foil frame tap gently to remove whiskers (Fig.12)
 6. Push the hair trimmer switch up to allow the trimmer to pop out (Fig.13)
 7. Clean the hair trimmer with the brush (Fig.14)
 8. After cleaning, retract the trimmer and attach the foil frame.

