

Instruction Manual for 7pc Grooming Set



Read through this entire instruction manual BEFORE using your 7pc Grooming Set.



EAR, SIDEBURN AND NOSE HAIR TRIMMER



Installing The Battery In Your Trimmer

1. Turn the battery cover left until the cover comes off.
2. Insert 1 'AA' battery according to indicated polarity.
3. Replace battery cover and turn to the right until cover locks into place.

Changing Trimmer Heads

1. Turn trimmer head to the left and pull off to remove.
2. Slide correct trimmer head onto the trimmer frame.
3. Turn trimmer head to the right until it locks into place.

Using Your Trimmer

(A) Sideburn Trimmer

You can use this attachment for smaller areas such as hairlines and sideburns. Hold the trimmer so the shaver screen gently touches your skin. Avoid holding the trimmer at an angle. This will distort the screen and may cause some skin irritation.

B) Nose/Ear Hair Trimmer

1. The Nose Trimmer is designed to remove unwanted hair from the nose or ear areas.
2. Gently approach the area to be trimmed. Never force the Nose Trimmer into nose or ear cavities as this can result in injury.
3. If you experience any pain or discomfort when using this product STOP using it immediately.
4. Always clean the clipper after use and use the cap to protect the Nose Trimmer head.

Safety Instructions

This trimmer is an electrical device; please pay attention to the following safety instructions:

1. Only use the trimmer as described in this manual.
2. Ensure tight fit of the cutting head.
3. Not suitable for children and keep out of reach of children.
4. The trimmer heads are washable. They can be cleaned easily and safely under running water.
5. Do not immerse the trimmer body in water.
6. Check trimmer for mechanical damages and replace if necessary. Never use a damaged trimmer as it may result in injury.

Note: Remove batteries when you want to discard unit.

DOUBLE FOIL SHAVER WITH SIDEBURN TRIMMER



Charging

1. Insert the adapter end of the charger into the bottom of the shaver. Plug the charger into an electrical outlet. The charging indicator light will come on, showing that the unit is charging. The light will not turn off once charging is complete. Please be aware of the charging time.
2. Normal charging time is 2 hours. (Note: Charging for less than 2 hours might cause damage to the battery and shorten the battery life.)
3. Charging power: AC 220V – 240V, 50 HZ.
4. Make sure battery is completely drained before charging. Charging before the battery is drained can shorten battery life.
5. Charging time should not exceed 5 hours as this may affect the life of the battery and damage the line.
6. The shaver can be used for approximately 7 shaves after a completed charge.



Using Your Shaver

1. Remove the blade cover. Push down the on/off switch and slide the switch up into the ON position. Gently touch the shaver foil to the skin and move slowly in the opposite direction of hair growth. Stretching skin tightly will help obtain a closer shave. Once you are finished shaving, slide the switch down to the OFF position and replace the blade cover.
2. Because this is a washable electric shaver, you may shave using shaving cream for better effect.
3. Make sure to clean after use to prolong blade life.

Using Your Pop Up Trimmer

1. Locate the trimmer on the back of the shaver. Slide the trimmer piece up all the way. Turn the unit on by pushing the on/off button and sliding the switch to the ON position.
2. Softly touch the trimmer to skin, holding the unit so the trimmer blades are at a right angle to the skin.
3. After use, turn the unit to OFF, slide the trimmer down and replace the cover.

Maintenance

1. Make sure unit is disconnected from any external power source.
2. Push the 2 buttons on both sides of the outer foil cover to release. Remove the outer cover. Using the included cleaning brush, remove all hair and dirt from inside the foil cover and blade area.
3. Blades and foils can be washed under water. Do not wash shaver body under water.
4. After cleaning, assemble the unit and place cover back onto the unit.



Notes

- *Do not press the net shelter.**
- *Do not pry open the net shelter with screwdriver.**
- *Do not use if the rotating screen is damaged.**

Safety Instructions

This shaver is an electrical device; please pay attention to the following safety instructions:

1. Only use the shaver as described in this manual.
2. Not suitable for children and keep out of reach of children.
3. The blades and foils are washable. They can be cleaned easily and safely under running water.
4. Do not immerse the shaver body in water.
5. Check shaver for mechanical damages and replace if necessary. Do not use the shaver if the rotating screen is damaged. Never use a damaged shaver as it may result in injury.

At Protocol, we're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials for 1 year from the date of purchase.

For service claims and questions please consult our website ProtocolNY.com or you may call toll-free at 1-800-261-1193.