

Assembly Instructions for 5-in-1 Trimmer Set

How To Use

Installing The Batteries

1. To install the batteries, gently press the button for the battery cover and lift the cover from the trimmer body.
2. Insert the batteries taking care to observe the correct polarities.
3. Replace the battery cover before use.
4. This product takes 2 AA batteries (not included).



Using The Trimmer

Slide the switch to the "ON" position. Carefully place the blade of the trimmer to your nostril to cut nose hairs. Use the same procedure for the shaver and trimming ear, sideburn and eyebrow hairs.

1. Shaver

You can use this attachment for shaving unwanted beard growth.

2. Eyebrow Trimmer

You can use this attachment for trimming unwanted eyebrow hair, fine facial and ear hair, or any stray body hairs.

3. Sideburn Trimmer

You can use this attachment for smaller areas such as hairlines and sideburns.

Hold the trimmer so the shaver screen gently touches your skin. Avoid holding the trimmer at an angle. This will distort the screen and may cause some skin irritation.

4. Nose/Ear Trimmer

- a) The nose trimmer is designed to remove unwanted hair from the nose or ear areas.
- b) Gently approach the area to be trimmed, never force the nose trimmer into nose or ear cavities as this can result in injury.
- c) If you experience any pain or discomfort when using this product STOP using it immediately.
- d) Always clean the trimmer after use.

Instructions For Head Replacements

To change attachments, hold the trimmer body with the switch side facing toward you. Press the button for the attachment and pull off. Position the replacement attachment at the top of the trimmer body, then push down and attach.

General Description

- | | |
|---------------------|----------------------|
| A. Shaver | E. Cleaning Brush |
| B. Eyebrow Trimmer | F. On/Off Switch |
| C. Sideburn Trimmer | G. Battery Door |
| D. Nose/Ear Trimmer | H. Attachment Button |



Cleaning & Maintenance

Clean your personal trimmer regularly. Be sure switch is turned "OFF" before cleaning.

Cleaning With Brush

Never expose trimmer to water. To maintain lubrication, use the enclosed brush to clean the unit. Thoroughly brush and blow out hair clippings from the power handle.

Batteries

1. Remove the batteries if the product is not going to be used for some time.
2. Always remove exhausted batteries from the product and dispose of safely. Store batteries in a cool location away from metal objects.